



KONTAKTDÜSEN


S-147 $\varnothing 6/M6 \times 25$

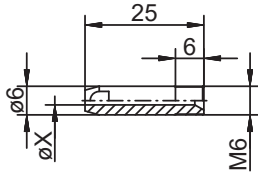


S-238 $\varnothing 8/M6 \times 28$

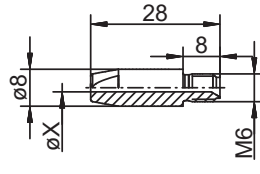


S-140 $\varnothing 10/M8 \times 30$

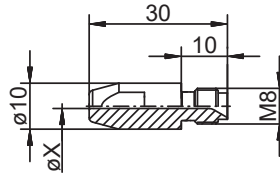


S-3849 $\varnothing 12/M10 \times 35$

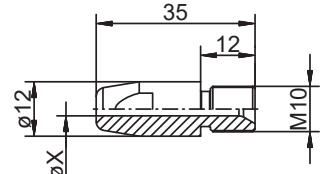


S-1129 $\varnothing 6/M6 \times 24$

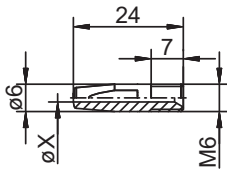


S-716 $\varnothing 8/M6 \times 28$

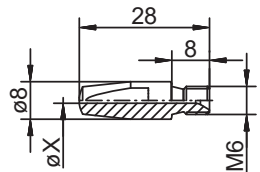


S-1597 $\varnothing 10/M8 \times 28$

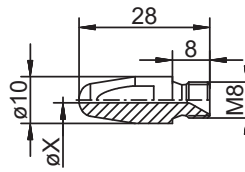


S-1743 mit oder ohne Ring

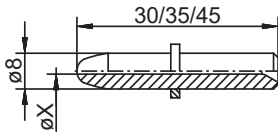


S-3059 mit oder ohne Ring

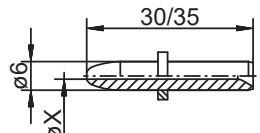


S-3086 für Doppeldraht

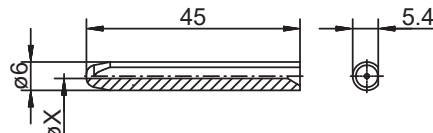


S-1110 $\varnothing 6/M6$ konisch x25

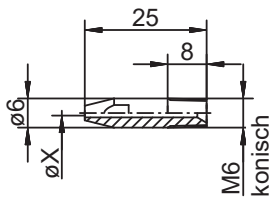


S-1542 $\varnothing 8/M8$ konisch x28

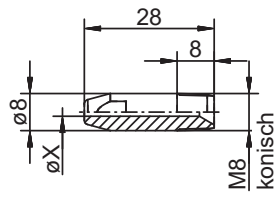


S-1111 $\varnothing 10/M10$ konisch x28

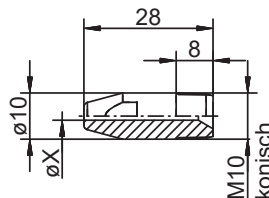


S-4029 $\varnothing 6/1/4 \times 26$

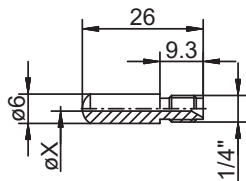


S-3604 $\varnothing 8/5/16 \times 34$

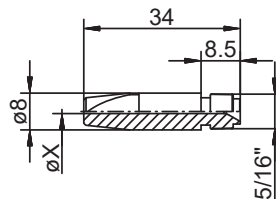

S-3866 $\varnothing 8/\text{Schnellgewinde} \times 34$

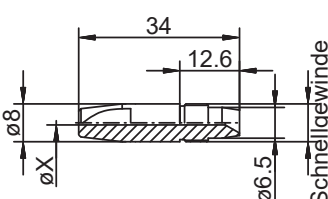

S-4064 $\varnothing 8/1/4 \times 34$

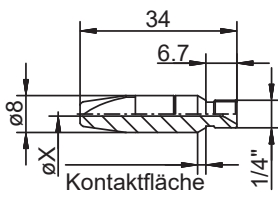

S-3773 $\varnothing 8/\varnothing 9 \times 41/35$

